

## COUNTERTOP DEEP FRYER

Item# 1417 **845.226.2447** 

## **OPERATION INSTRUCTIONS:**

Plug in the fryer and fill the oil area with up to 5lbs of oil. Turn the machine on and turn the heat to high. The oil will pop when it has reached optimal temperature. You can adjust the heat to your desired cooking temperature now. Pull the basket up and load whatever foods you would like into it. Slowly submerge the basket and when the food floats to the top it is done.

CLEAN UP: Empty grease AFTER IT HAS COOLED and dispose of it properly. Wipe the machine down with a rag and warm soapy water. DO NOT submerge the machine in water.



## **POWER REQUIREMENTS:**

Dedicated 20 AMP Circuit.

\*\* Be Sure that nothing else
is plugged into the same circuit



## **SPACE REQUIREMENTS:**

H: 12.75" x W: 7.5" x D: 17.5"



**OPTIONAL EQUIPMENT:** 



OTHER REQUIREMENTS:

Oil. friable foods



Grease will be extremely hot. Please use caution during operation

