

INFLATABALE BOUNCE HOUSE

Item # 2034

845.226.2447

INSTRUCTIONS:

Find a flat area of grass and unroll the inflatable. Once completely unrolled, find the “sock” that sticks out and slips over the blower. Tighten the sock around the blower so it won’t fly off when turned on. Turn blower on and let fully inflate. Once the bouncer is inflated, stake the corners down ensuring that the stakes are fully buried.

To fold the inflatable for return, fold into thirds and then start rolling as tightly as possible. Roll inflatable on top of rope that is provided and tighten around the roll with a slipknot.



POWER REQUIREMENTS:
Dedicated 20 AMP Circuit.
** Be Sure that nothing else is plugged into the same circuit

SPACE REQUIREMENTS:
18' x 18'

OPTIONAL EQUIPMENT:

OTHER REQUIREMENTS:
Stakes, hammer

Clean up: Let the inflatable deflate by turning off the power to the blower. Fold inflatable into thirds and then roll into a cylinder