

NACHO CHEESE WARMER

Item # 1602

845.226.2447

INSTRUCTIONS:

Take off the top/back of the machine and place nacho cheese bag nozzle side down and place into the notch on the front of the machine. Insert red push button where cheese bag nozzle sits. Plug in machine, wait 10 minutes for cheese to heat and enjoy!



POWER REQUIREMENTS:

Dedicated 20 AMP Circuit.

** Be Sure that nothing else is plugged into the same circuit



SPACE REQUIREMENTS:

10" x 16.5" x 27.375"



OPTIONAL EQUIPMENT:

Nacho chips



OTHER REQUIREMENTS:

140 oz bag of nacho cheese

Clean up:

Use a rag and warm water to wipe off any excess cheese that may have gotten onto the machine