

NACHO CHIP WARMER

Item # 1608

845.226.2447

INSTRUCTIONS:

Plug machine in and flip power switch to the “on” position – dump nacho chips into machine – wait 10 minutes for chips to warm and enjoy!



POWER REQUIREMENTS:

Dedicated 20 AMP Circuit.

** Be Sure that nothing else is plugged into the same circuit



SPACE REQUIREMENTS:

15.5" x 12.5" x 23"



OPTIONAL EQUIPMENT:

Nacho Cheese,
chip containers



OTHER REQUIREMENTS:

Nacho chips



Clean up:

Use a rag and warm water to wipe down the machine. Wait for machine to cool before attempting to touch