

# POPCORN MACHINE

Item # 1610

845.226.2447

## OPERATION INSTRUCTIONS

1. TURN ALL SWITCHES TO "ON"
2. FOR FIRST BATCH ONLY, LET KETTLE HEAT FOR APPROXIMATELY 4 MINUTES
3. LOAD THE ENTIRE CONTENTS OF ONE PRE-MEASURED POPCORN PACK
4. WHEN POPPING NOISE SLOWS DOWN AND POPPING IS ABOUT 99% COMPLETED, DUMP CONTENTS OF KETTLE OUT INTO THE MACHINE
5. REPEAT STEPS 3 & 4. FOR BEST RESULTS, ALWAYS POP 3-5 BATCHES.
6. ON FINAL BATCH ONLY, TURN HEAT SWITCH TO "OFF" WHEN THE POPPED CORN BEGINS TO RAISE THE LID.
7. DUMP CONTENTS OF KETTLE WHEN POPPING IS ABOUT 99% COMPLETED
8. TURN OFF KETTLE MOTOR SWITCH
9. CONFIRM THAT ALL SWITCHES ARE TURNED OFF.

## CLEAN UP/ TAKEDOWN

EMPTY REMAINING CONTENTS OF KETTLE. PULL OUT AND EMPTY THE KERNEL CATCH PAN LOCATED UNDERNEATH THE UNIT. WAIT UNTIL COOL AND WIPE KETTLE INSIDE AND OUT, CEILING, WINDOWS AND DOORS WITH A HOT, SOAPY RAG. RINSE WITH CLEAN RAG. DRY. WASH, RINSE AND DRY THE KERNEL CATCH PAN.

- DO NOT DISASSEMBLE ANY PART OF THE MACHINE
- DO NOT USE ANY GLASS CLEANER (i.e. WINDEX) ON THE PLEXIGLASS
- DO NOT USE ANY CHEMICAL CLEANERS ON METAL AS THEY MAY BE CORROSIVE



### POWER REQUIREMENTS:

Slkjdlk



### SPACE REQUIREMENTS:

24"W x 24"D x 30"



### OPTIONAL EQUIPMENT:

Popcorn Cart  
Popcorn Bags & Popcorn



### OTHER REQUIREMENTS:

Table Required when not  
using optional cart



**CAUTION- NEVER TOUCH THE KETTLE! SERIOUS BURNS WILL OCCUR!**

**WARNING!!- LEAVING THE KETTLE HEAT SWITCH ON WHEN NOT POPPING WILL CAUSE SMOKE, BURNED POPCORN, BAD ODOR AND WILL DAMAGE THE UNIT!**